

Waterproof Frame Bag Instruction Sheet Model #AC840

1-800-621-7613

customerservice@radioflyer.com

WARNING!

- Read all safety warnings and instructions before using the product. Failure to follow warnings and instructions may result in serious injury or death.
- You must also reference the owner's manual that was shipped with your Flyer™ eBike before using this accessory:




- Incorrect assembly, maintenance, or use of your Flyer™ accessory can cause component failure, loss of control, serious injury, or death. Please note, the assembly of Flyer™ accessories require special tools and mechanical skills. It is highly recommended that the assembly and adjustment are completed by a reputable bicycle mechanic when possible.
- Only for use with the Flyer™ eBike.
- Adding load to accessories may lessen the stability or alter the riding characteristics of the bicycle.
- Do not exceed maximum loading of the eBike, including all passengers and cargo, as specified in the owner's manual.
- Do not install, remove, access, or adjust this accessory while riding. Bring the eBike to a full stop and fully engage the kickstand before interacting with the accessory.
- Tighten mounting straps, secure cargo, and close storage accessory before riding.
- Do not leave storage bag in direct sunlight for extended periods of time. Leaving storage bag in direct sunlight may cause contents inside to increase in temperature.


Specifications:

- Maximum Load Capacity: 5 lbs
- Storage Dimensions: 10" x 5.75" x 3"
- Storage Volume: 1.50L

Align bag with the frame

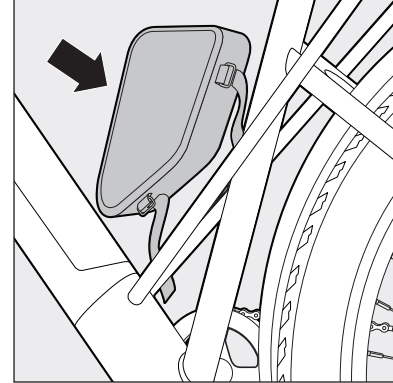

Attach bag to frame using Velcro loops

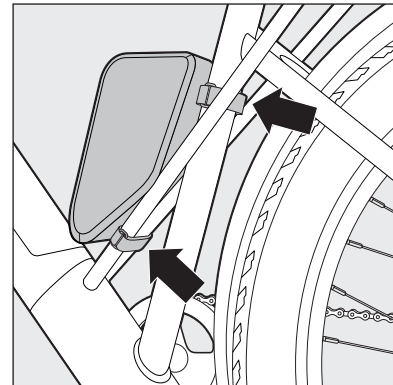

Use & Care Guide

Spot clean by hand washing with mild soap and water and allow to air dry

Do not machine wash

Do not bleach

Do not iron