

**Cyberquad for Kids**  
**Motor Controller Removal Instructions**

**Step 1:** Remove the battery pack by engaging the battery latch and pulling the battery out of the compartment.



**Step 2:** Using a Phillips screwdriver, remove two screws within the battery housing.





**Step 3:** Remove the seat by lifting up on the rear edge and pulling back simultaneously.





**Cyberquad for Kids**  
**Motor Controller Removal Instructions**



**Step 4:** Using a Phillips screwdriver, remove two screws securing the power connector plate.

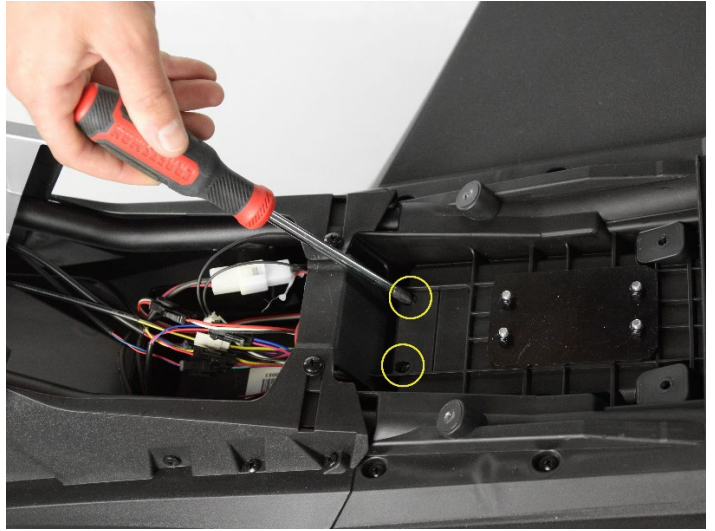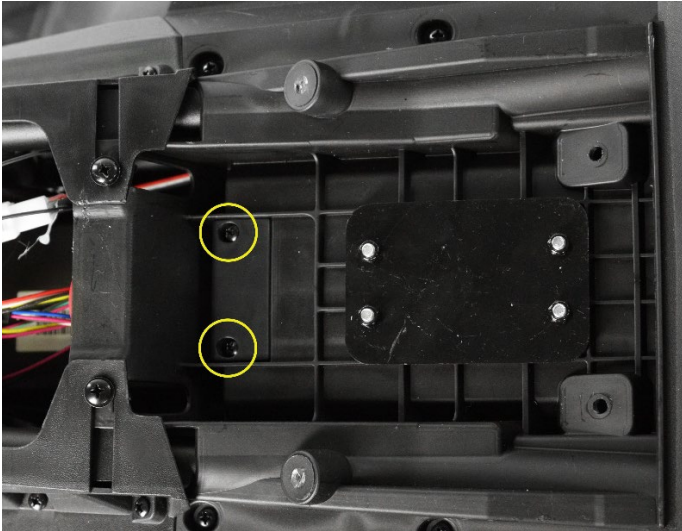

**Step 5:** Using a Phillips screwdriver, remove four screws fastening the motor controller to the body.

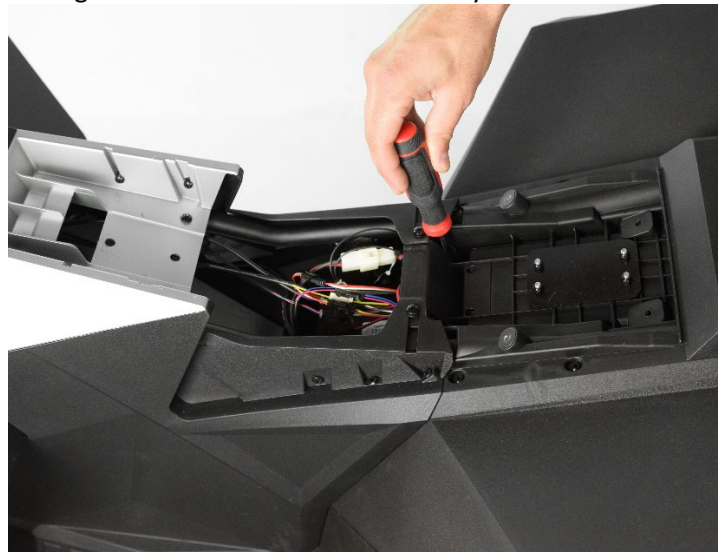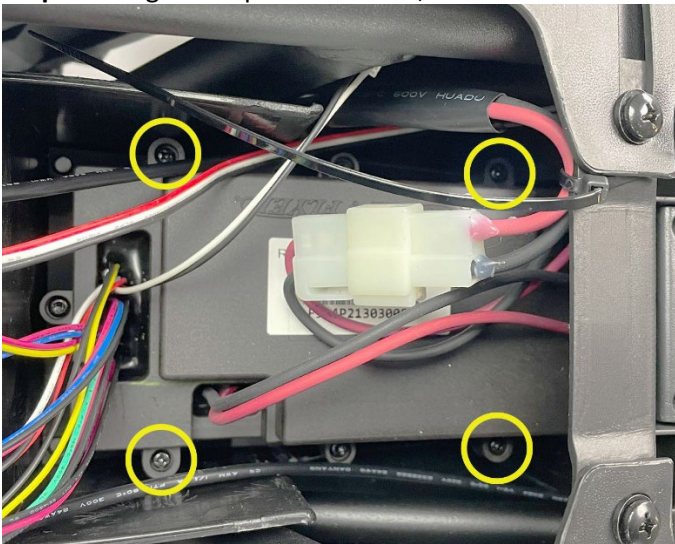


**Step 6:** Disconnect all nine connectors attached to the motor controller, by squeezing the tabs and pulling both ends.

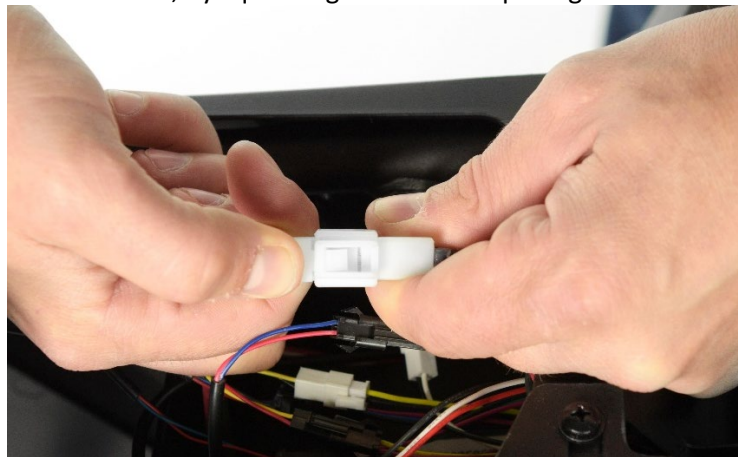
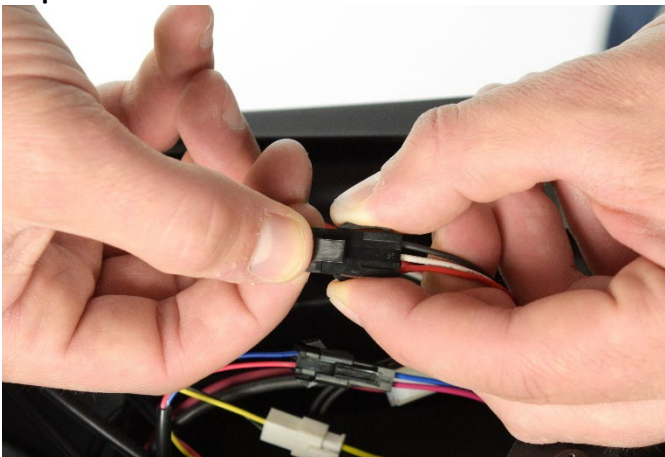


**Cyberquad for Kids**  
**Motor Controller Removal Instructions**

**Step 7:** Cut the two zip ties that secure the wire harness to the body.

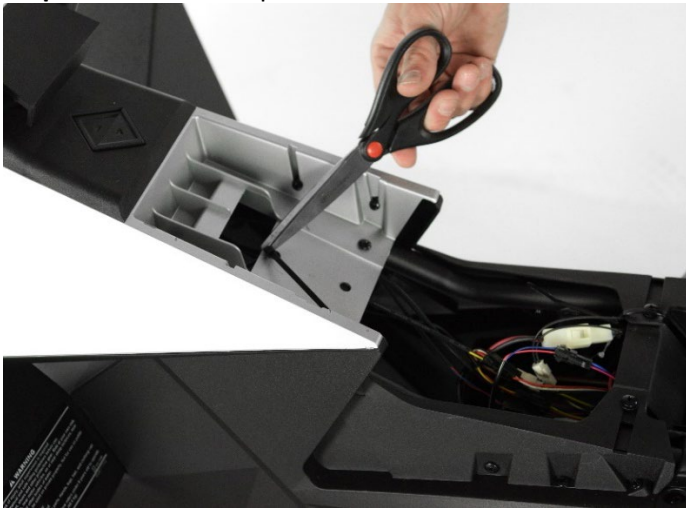

**Step 8:** With all nine connectors detached, remove the motor controller from the body.

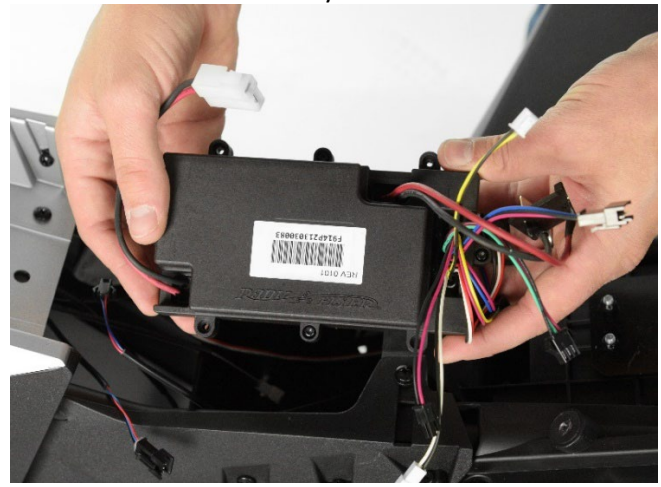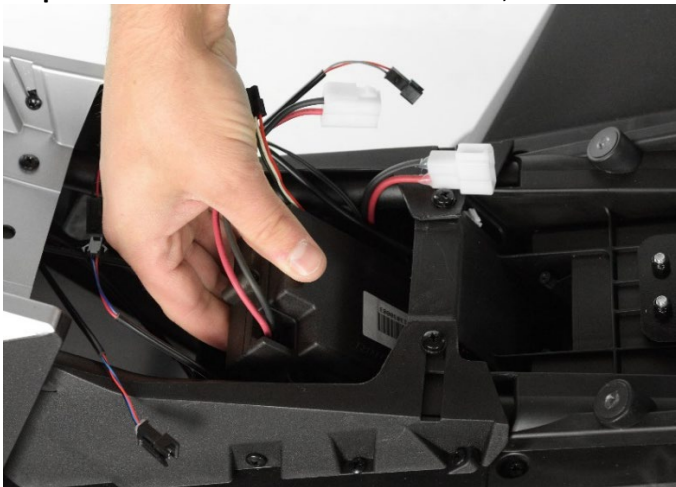

**Step 9:** Remove the return envelope from the larger envelope. Place the motor controller in the return envelope with the shipping label applied. Drop off at a UPS store to start the return process.

