

Kid & Cargo Carrier Instruction Sheet Model #AC804

Compatibility: Flyer™ L885

⚠️ WARNING!

- Read all safety warnings and instructions before using the product. Failure to follow warnings and instructions may result in serious injury or death.
- You must also reference the owner's manual that was shipped with your Flyer™ eBike before using this accessory:




- Incorrect assembly, maintenance, or use of your Flyer™ accessory can cause component failure, loss of control, serious injury, or death. Please note, the assembly of Flyer™ accessories require special tools and mechanical skills. It is highly recommended that the assembly and adjustment are completed by a reputable bicycle mechanic when possible.
- Only for use with the Flyer™ eBike.
- Adding load to accessories may lessen the stability or alter the riding characteristics of the bicycle.
- Maximum Load Capacity: 130lbs
- Rider and children should always wear helmets that have been approved to nationally recognized standards.
- Only carry children ages 5-10 years
- Step off of the bike and put the bike on its kickstand before assembling, adjusting or interacting with accessories.

HARDWARE

A 4X - M5 22mm Pan Head Screw



B 4X - M5 27mm Pan Head Screw

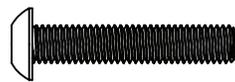

C 8X - M5 35mm Pan Head Screw



D 8X - M5 Lock Washers



E 24X - M5 Washer




F 8X - M5 Lock Nut




TOOLS

M4 Allen Key

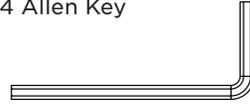

M3 Allen Key

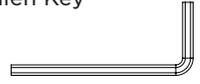


Hex Wrench




PARTS


A 2X - Padded Seat Assembly

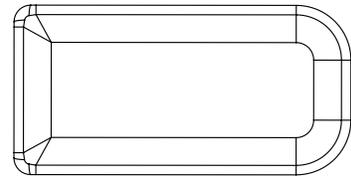

B 1X - A Frame, Rear

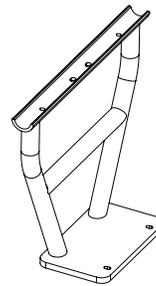

C 1X - A Frame, Front

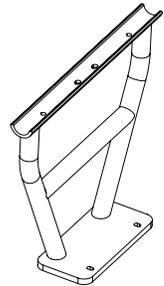


D 2X - Hoop




E 1X - Steel Ring, Left



F 1X - Steel Ring, Right

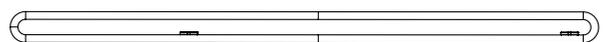

G 1X - Fabric

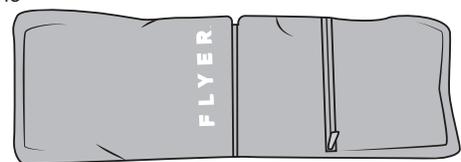


Constructing Kid & Cargo Carrier Frame

Align the left and right hoops with the bottom support frames. Place a washer on each 35mm screw.

Feed the bolts through the holes that run through the top hoops and bottom frame.




Place an additional washer on each bolt where it extends from the bottom frame. Tighten with a locknut to 3Nm.

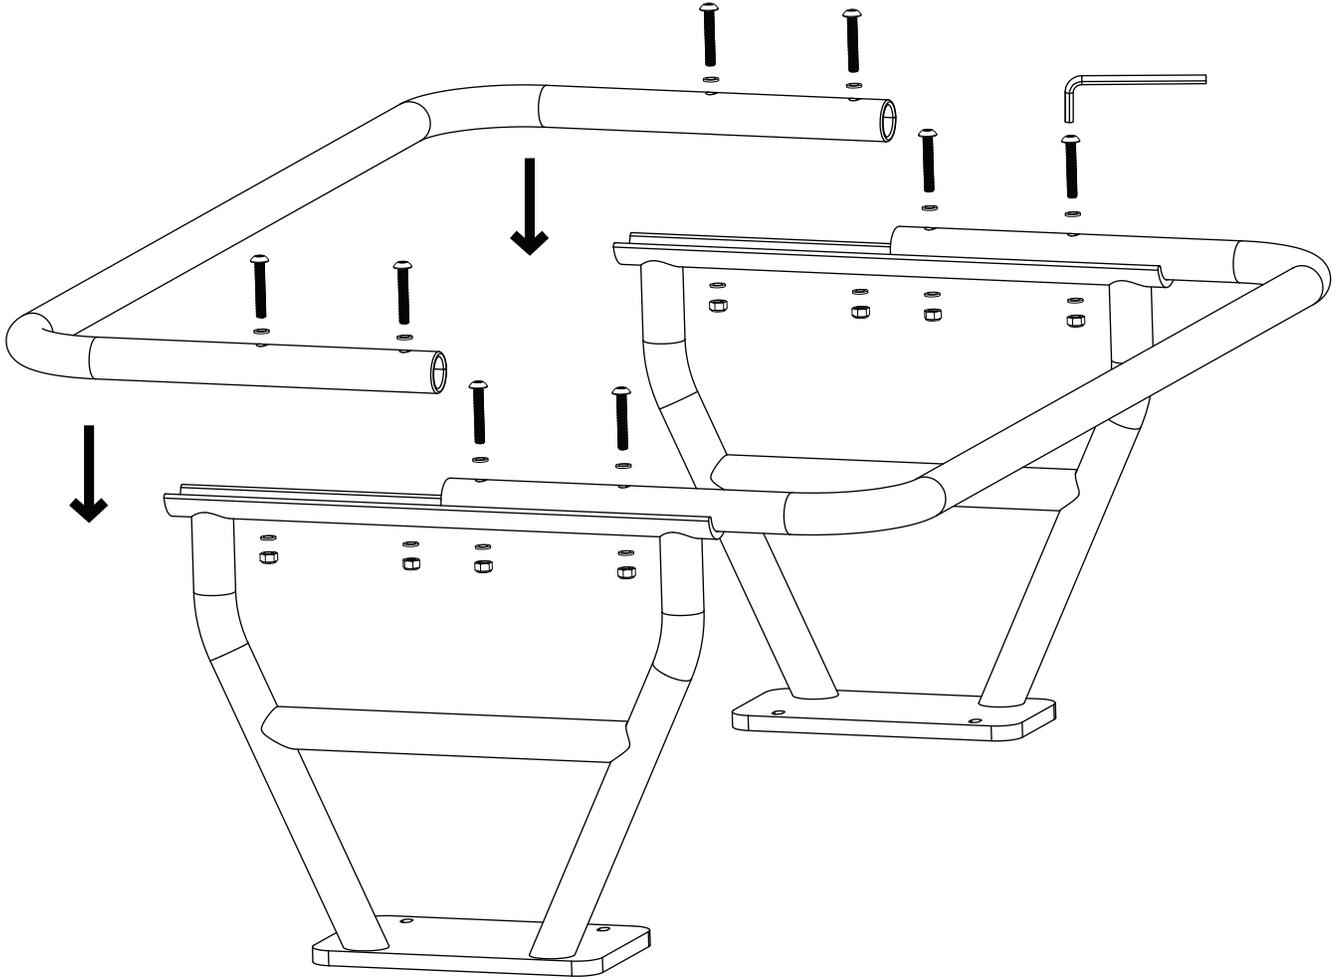

Installing Kid & Cargo Carrier Frame





A. Remove both wooden seats that cover the threaded inserts.

B. Slide a lock washer onto each 22mm screw. Next, slide a washer onto each screw. Lay the Kid & Cargo Carrier on the bike's rear rack and align the holes. Ensure the A Frame with the larger plate is at the back of the bike. Tighten the 4 screws by hand, then fully tighten using the Allen key to 3Nm.

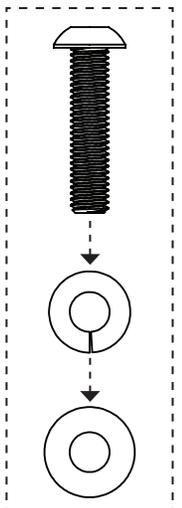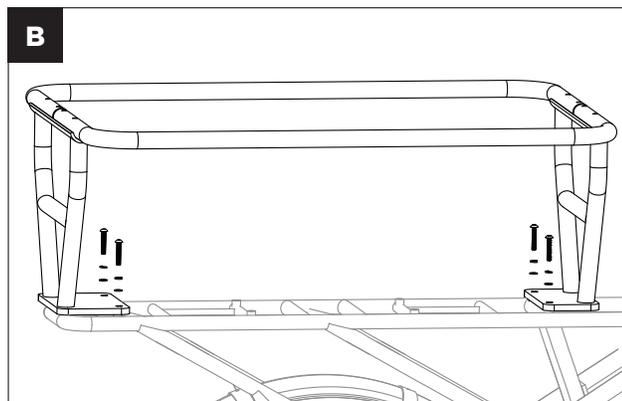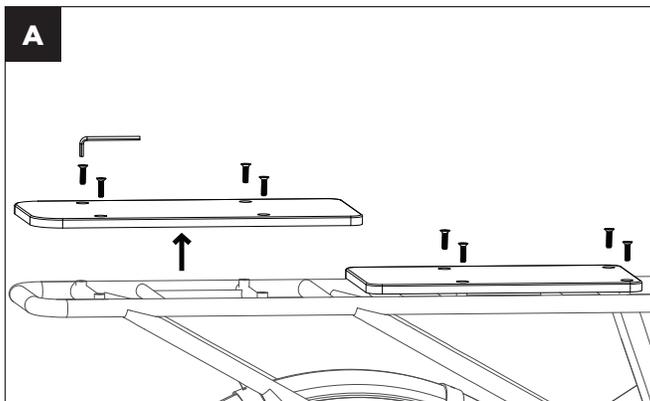


Installing Steel Rings

- A. Starting with the right running board, unscrew the two interior flat head screws.
- B. Align the tabs of the steel ring to the running board. The loop of the ring should face up, extending off the back of the running board. Slide a lock washer onto each 27mm screw. Next, slide a washer onto each screw. Tighten the 27mm screws by hand, running through the tabs and into the running boards. Once both screws are aligned and tightened by hand, fully tighten them using the Allen Key to 3Nm.
- C. Repeat steps A and B for the left running board.

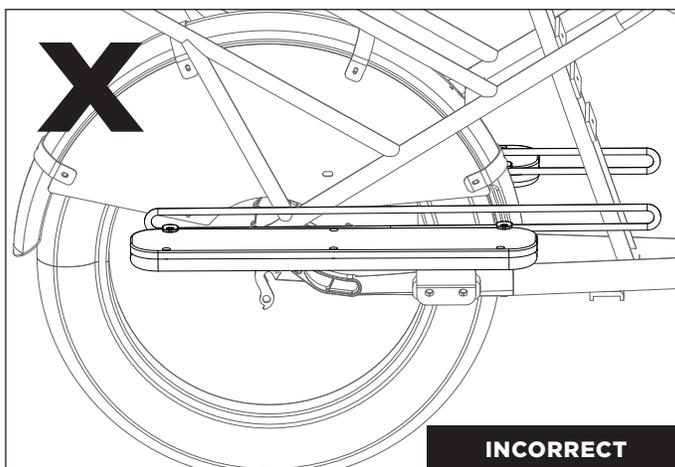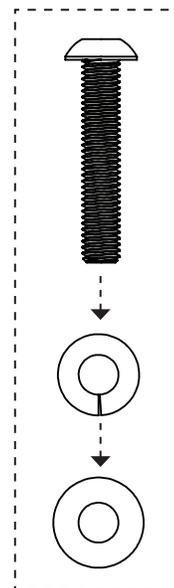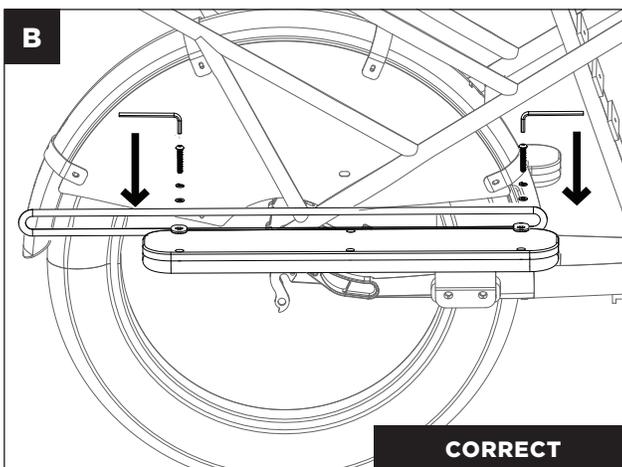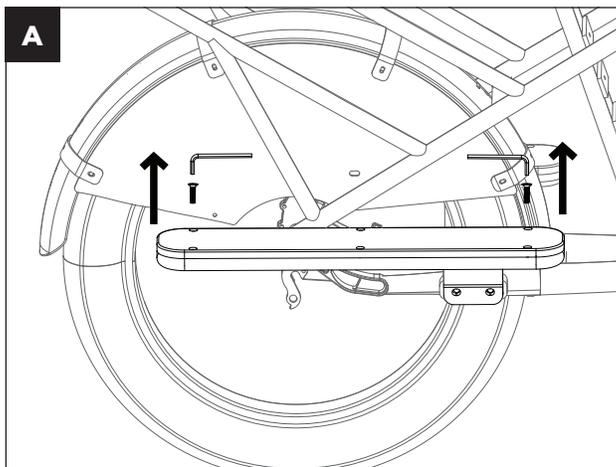


Installing Fabric Liner in Cargo Mode

- A. Place the fabric liner into the basket with the “Flyer” logo facing backwards.
- B. Snap down the front and rear flaps.
- C. Drape the side flaps over the side bar and click the 3 buckles on each side in place.
- D. Zip up the 4 corners.



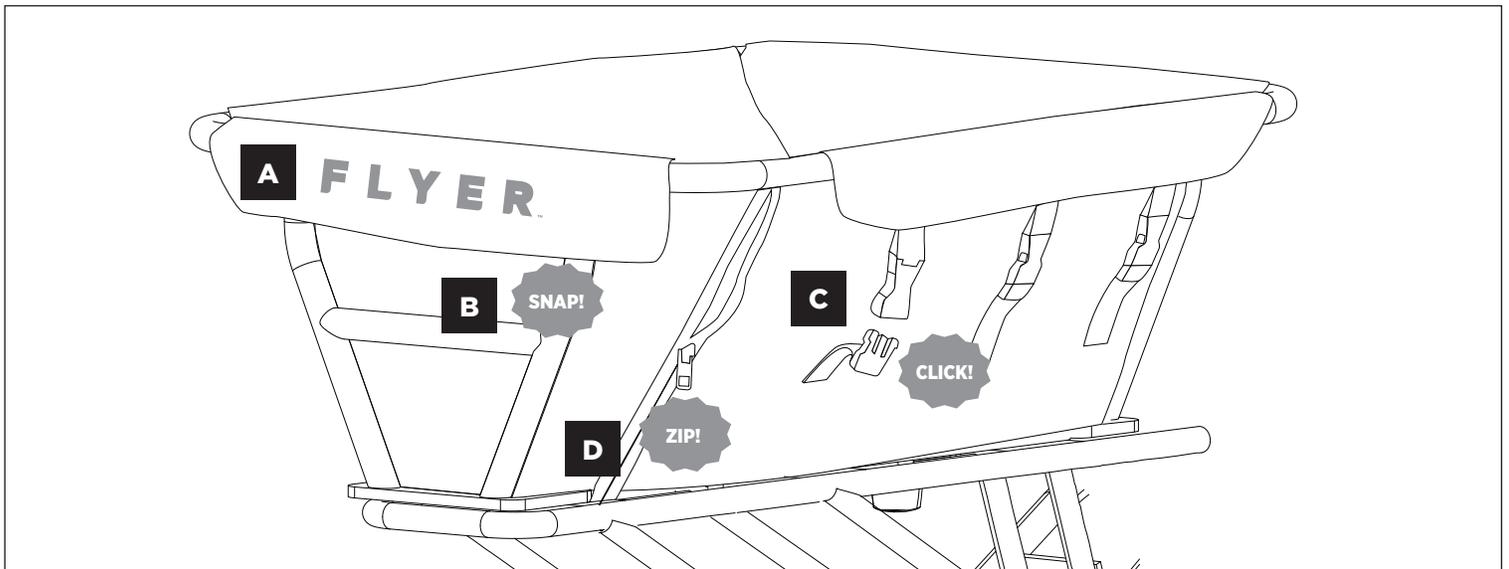


Installing Padded Seats

- A. Align the metal bracket so the plastic seat and the bracket fit through the hole in the frame.
Place both seats into position by loading the plastic extrusion through the square holes in the bike's frame.
- B. Loosen the twist knob on the underside of the padded seat to remove the metal bracket and knob.
- C. Reorient the metal bracket so the grooves line up with the smaller tubes on the bike frame.
- D. Retighten the twist knob until the padded seat is secured firmly to the frame.
- E. Repeat steps B through D for the second seat.



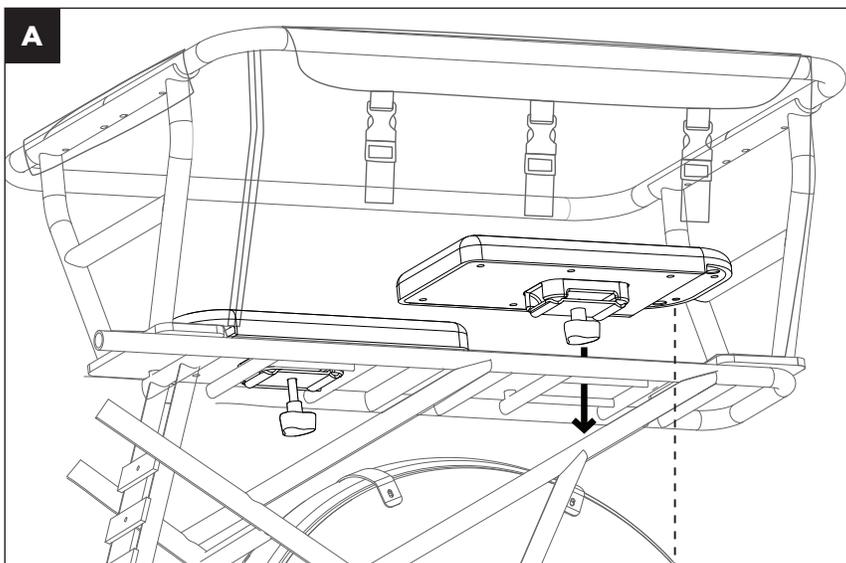


Ensure lips face outward

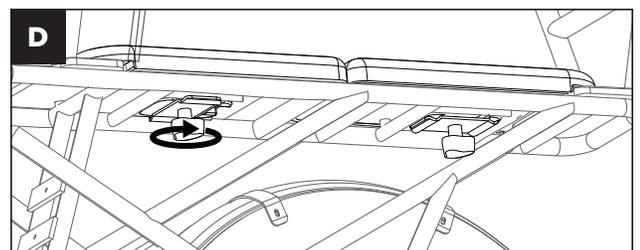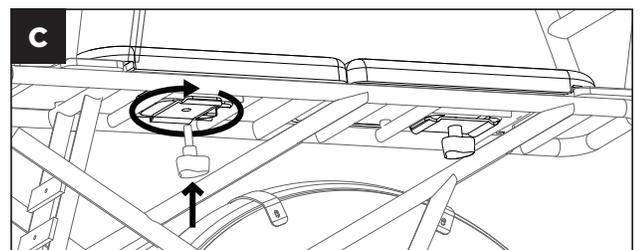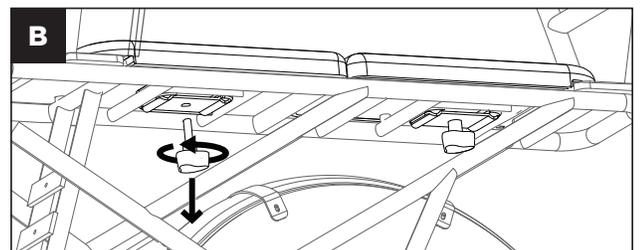

Converting to Kid Mode

- A. Unzip all four corners, and unclip all six buckles.
- B. On the left side, feed all three buckles through the steel ring. They should be inserted from the outside to the inside.
- C. Reclip all buckles back into place.
- D. Repeat steps a through c for the right side.

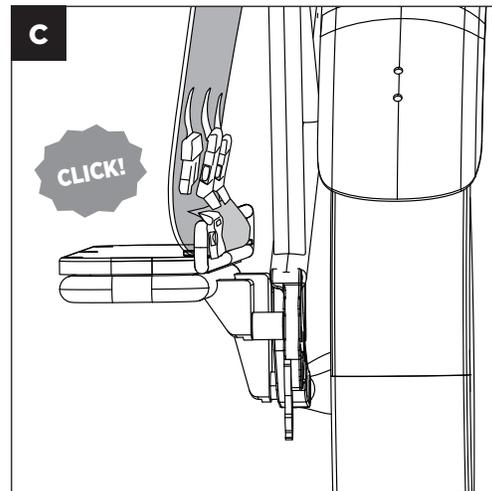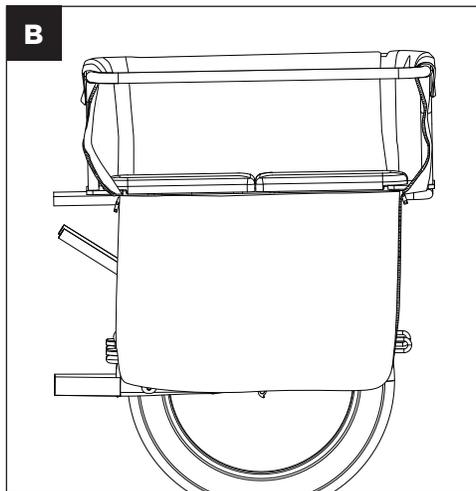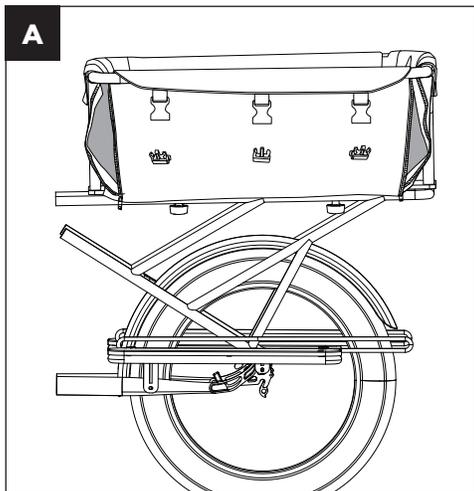

 **WARNING!** Ensure fabric flaps are clipped into place prior to riding.

Securing the Yepp Maxi Seat Safety Strap

(Optional Add-on, Not Included)

Your Thule seat can be used in the front or rear of the Kid & Cargo Carrier. You can use one or two Thule seats with the Carrier. Full installation instructions for the Thule Yepp Maxi seat can be found at the following link:



- A. If positioning your child seat in the front of the Carrier, thread the safety strap through the hole in the fabric and around the seat post. Thread the strap through the ratchet and tighten.
- B. If positioning your child seat in the rear of the Carrier, while using another child seat in the front, loop the strap around the metal bar of the Thule seat in front of it. Thread the strap through the ratchet and tighten.
- C. If positioning your child seat in the rear of the Carrier with a seat pad in front of it, thread the safety strap under the fabric liner and loop it around the smaller bar shown below. Thread the strap through the ratchet and tighten.
(Tip: It is easier to install if the front padded seat is fully removed beforehand.)

